



Q5600

6"Two Way Full Range Pro Speaker System

User Manual

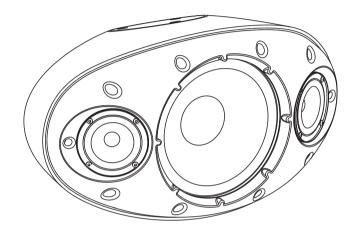

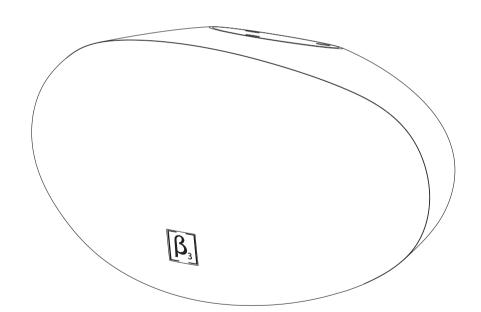



UM-QS600-20170808 Ver B

SAFETY INSTRUCTIONS

PLEASE READ THIS MANUAL FIRST

Thank you for a buying product. Read this manual first as it will help you operate the system properly. Please ke for future reference.



🛕 WARNING: This product must be installed by professionals. When using hanging brackets or rigging other than those supplied wi the product, please ensure they comply with the local safety codes.



CAUTION

RISK OF ELECTRICAL SHOCK DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.



ATTENTION : POUR RÉDUIRE LE RISQUE DE DÉCHARGE ÉLECTRIQUE, NE RETIREZ PAS LE COUVERCLE (OU L'ARRIÈRE). IL NE SE TROUVE À L'INTÉRIEUR AUCUNE PIÈCE POUVANT ÊTRE RÉPARÉE PAR L'USAGER. S'ADRESSER À UN RÉPARATEUR COMPÉTENT.



The exclamation point within an equilateral triangle is intended to alert you to the presence of important operating and servicing instructions.

⚠ ATTENTION: Don't refit the system or spare parts without being authorized as this will void the warranty.

lacklack WARNING: Don't place naked flames (such as candles) close to the equipment.

- Read the instruction manual first before using this product. 1.
- 2. Please keep this manual for future reference
- 3. Pay attention to all warnings.
- 4. Obey all operating instructions.
- Do not expose this product to rain or moisture.
- Clean this equipment with a dry cloth.
- Do not block any ventilation openings. Install according to manufacturer's instructions. 7.
- Do not install this product near any heat source, such as a, heater, burner, or any other equipment with heat radi
- 9. Only use spare parts supplied by the manufacturer.
- 10. Pay attention to the safety symbol on the outside of the cover.



CONTENT


INTRODUCTION —	— 3
Features-	- 3
Description	— 3
Applications	— 3
CONNECTION —	- 4
Terminal Pla te	- 4
System Connection Reference	- 4
INSTALLATION —	- 5
Installation Acces sories	- 5
Installation Refer ence	- 5
TECHNICAL SPECIFICATION —	- 6
Technical Sheet	- 6
Frequency Response And Impedance Cu rve	— 6
2D Dimension —	- 7


QS600

6"Two Way Full Range Pro Speaker System

Features

- Two new 3-inch paper cone mid-high frequency dri/vers.
- 6-inch paper cone low frequency driver.
- High intensity injection moulding cabinet.
- Dispersion 140° x 160° .
- Frequency response 80 Hz 16k Hz (-3dB).
- Sensitivity 88dB, Max SPL 120 dB.
- \blacksquare 3 x M8 hang point.
- Customizable grill and cabinet color.

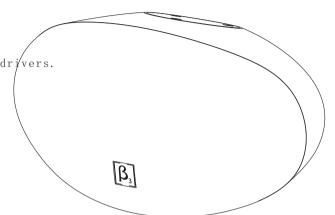

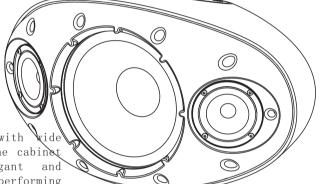

Description

QS600 is a 6"2-way full range speaker system with vide dispersion. Its sound is nature and clear while the cabinet is handy, compact and the appearance elegant and fashionable. It's applicable in small and medium performing stages, KTV, multi-function halls as sound monitoring and major and fill sound reinforcement.

QS600 adopts two 3-inch new paper cone high frequency speakers which greatly enhance the performance and power loading capacity in the mid-high frequencies. The optimized 6-inch low frequency driver can realize highest clearance and lowest distortion in high sound pressure. The 12 dB attenuation slope cross frequency circuit enables smooth frequency response. And the full range circuit protecting system provides higher security.

The cabinet is injection moulded with high intensity polypropylene. The delicate designed shape provides best structure strength and acoustic characteristics. The colors of grill and cabinet are available for customization. Applications


QS600 adopts multifunctional structure design. \blacksquare INTV applicable both in mobile and stage performance. Our special designed accessories with the 3 x M8 hanging \blacksquare poMnTitor can be used in various installation requirements easily and conveniently. \blacksquare Public Avenue

- Small Performance
- Multifunction Rooms




QS 600 connects the amplifier with a wire clamp.

Terminal Plate

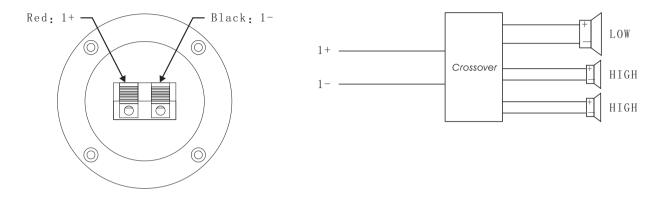

System Connection Reference

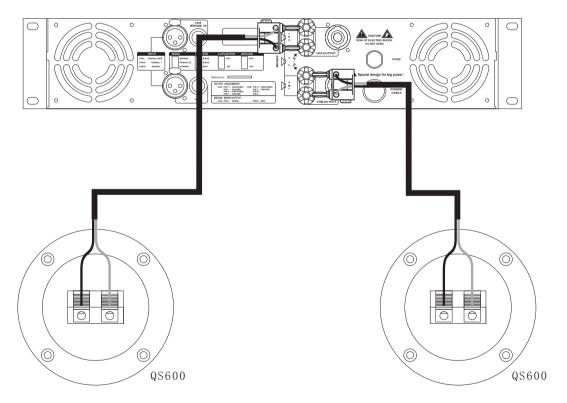

Attention: The impedance of connected speaker must match the impedance of amplifier output.

Attention: Make sure the polarity of speaker and amplifier correctly.





Installation Accessories

Installation Reference


QS600 has 3 hanging points to work together with theiling special designed accessories for fast and convenient hanging, wall-mounting and on standing with adjustable angles.




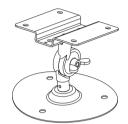

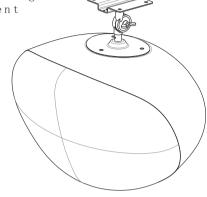


2. Wall Bracket

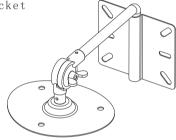


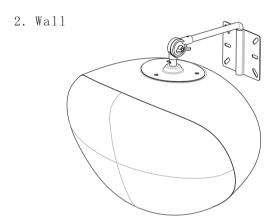

 3. Standing Bracket



3. Support

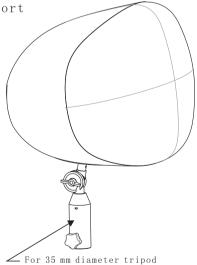

Warning: Make sure the mounting accessories safety factor not less than 5:1 or meet the local standard during installation.



Technical Sheet

System: Two way full range speaker Tweeter: 2 x 3"High frequency drivers Woofer: 1 x 6"Woofer Frequency response (-3d8)0Hz-16kHz Sensitivity (1W@1m)88dB Max. SPL (1m³):114dB/120dB(PEAK) Power: 80W (RMS)4 160W (MUSIC) 320W (PEAK) Dispersion ($H \times V$) 140 °x 160 ° Rated impedance:8 Ohms Crossover poin 2;5 kHz Cabinet: Polypropylene injection moulding Mounting accessorie3 x M8 Bracket lifting point Painting :Cabinet Exterior with/without polyurethane spraying treatment (depends on colors)Grill with cloth Connector: Wire clamp Cabinet dimension399mm×241mm×229mm $(W \times D \times H)$ (15.7in \times 9.5in \times 9in) Package dimension452mm×310mm×525mm $(\mathbb{W} \times \mathbb{D} \times \mathbb{H})$ (17.8in×12.2in×20.1in) N. W. (2pcs) 9kg(19.8 lb.) G. W. (2pcs) 10kg(22 lb.)

Speaker Testing Method

1. Frequency response

Use Pink noise to test the speaker in the anechoic room, adjust the level to make the speaker work at its ratimpedance and the power output is 1W, then test the frequency response 1m away from the speaker.

2. Sensitivity

Use full range Pink noise which was modified by EQ curve to test the speaker in the anechoic room, enlarge the signal to make the speaker work at its rated impedance and the power output is 1W, then test the sensitivity 1m away from the speaker.


3. MAX. SPL

Use full range Pink noise which was modified by EQ curve to test the speaker in the anechoic room, enlarge the signal to make the speaker work at its instant power output level, then test the SPL lm away from the speaker.


4. Rated Power


Use the pink noise according to IEC#268-5 to test the speaker, enlarge the signal for continuous 100hours, the rated Power is the power when the speaker will not incur hot damage or mechanics damage.


Frequency Response And Impedance Curve

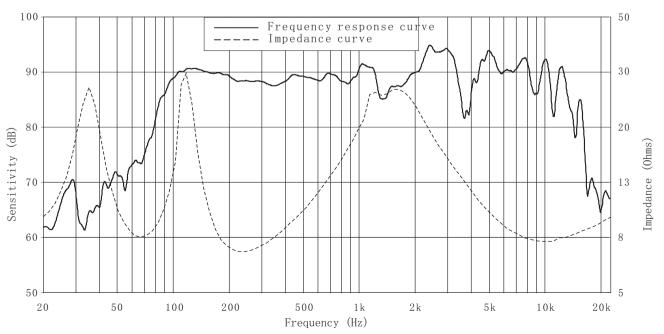



2D Dimension

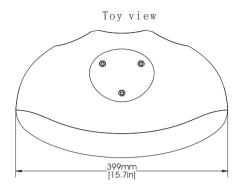

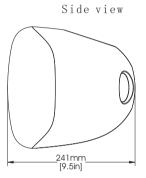

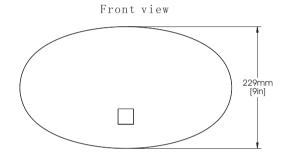

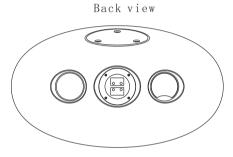

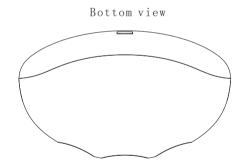

Notes:

